

# **KRATOS**

## **4 SLICE POP-UP TOASTER MANUAL**



**29M-011**

*Please read and keep these instructions.*

**Central Restaurant Products®**

7750 Georgetown Road • Indianapolis, IN 46268

**800.222.5107** • [www.centralrestaurant.com](http://www.centralrestaurant.com)

# POP-UP TOASTER MANUAL

Thank you for choosing to purchase from Kratos. Every Kratos product is manufactured with the customer in mind, providing the best value without sacrificing quality. This Kratos Pop-Up Toaster is ETL-certified, meeting key sanitation and operational needs.

## TABLE OF **Contents**

**03 RECEIVING** INSTRUCTIONS

---

**04 SAFETY** INFORMATION

---

**05 KEY** PARTS

---

**06 CIRCUIT** DIAGRAM

---

**07 OPERATION** INSTRUCTIONS

---

**08 CLEANING** INSTRUCTIONS

---

**09 TROUBLESHOOTING** GUIDE

---

**10 WARRANTY** INFORMATION

---

# POP-UP TOASTER MANUAL

## Receiving & Inspecting EQUIPMENT

Care must be taken during unloading so the equipment is not damaged while being moved into the building.

1. Visually inspect the exterior of the package. Note any damage and report it to the delivering carrier immediately.
2. If damaged, open and inspect the contents with the carrier.
3. In the event that there is concealed damage upon opening, notify the carrier. Notification should be made verbally as well as in written form.
4. Request an inspection by the shipping company of the damaged equipment. This should be done within 10 days from receipt of the equipment.
5. Freight carriers can supply the necessary damage forms upon request.
7. Retain all crating material until an inspection has been made or waived.

# POP-UP TOASTER MANUAL

## Safety INFORMATION

**IMPORTANT SAFETY INFORMATION—Save these instructions and always follow safety guidelines when operating electrical equipment.**


1. Read and understand all instructions before operating this equipment.
2. This toaster oven is for commercial purposes only.
3. Keep all cords, plugs, and other electrical components away from liquids to prevent electrical shock.
4. Never touch the hot surfaces while in use.
5. Unplug the toaster when not in use and before cleaning.
6. Do not operate the toaster with any noticeable damage or malfunctions to the oven, cord and plug.
7. Designed for indoor use only, do not use outdoors.
8. Ensure your outlet and voltage is correct for the plug type
9. Before unplugging the unit, turn the timer and temperature knobs both to the "OFF" position.
10. Never place metal utensils or oversized foods inside the toaster slots that could lead to electrical shock or fire.
11. Do not store anything on top of the toaster.
12. Keep clear of all flammable materials during operation.
13. Do not clean with metal scouring pads which will shorten the life of the unit and increase electrical shock risks.
14. Do not place materials such as paper, cardboard, plastic, etc. in the toaster.
15. Use of accessories not recommended by the manufacturer may result in injury or damage to the unit.
16. Only trained adults should operate this unit and any children nearby need supervised.
17. This appliance is not intended for use by anyone with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. Ensure the toaster is on a flat surface that is well ventilated. The appliances should ALWAYS be supervised during operation. DO NOT leave the appliance unattended without powering off.

**NOTE: Save these instructions for future reference.**

# POP-UP TOASTER MANUAL

## Key PARTS


### Identification of Key Parts

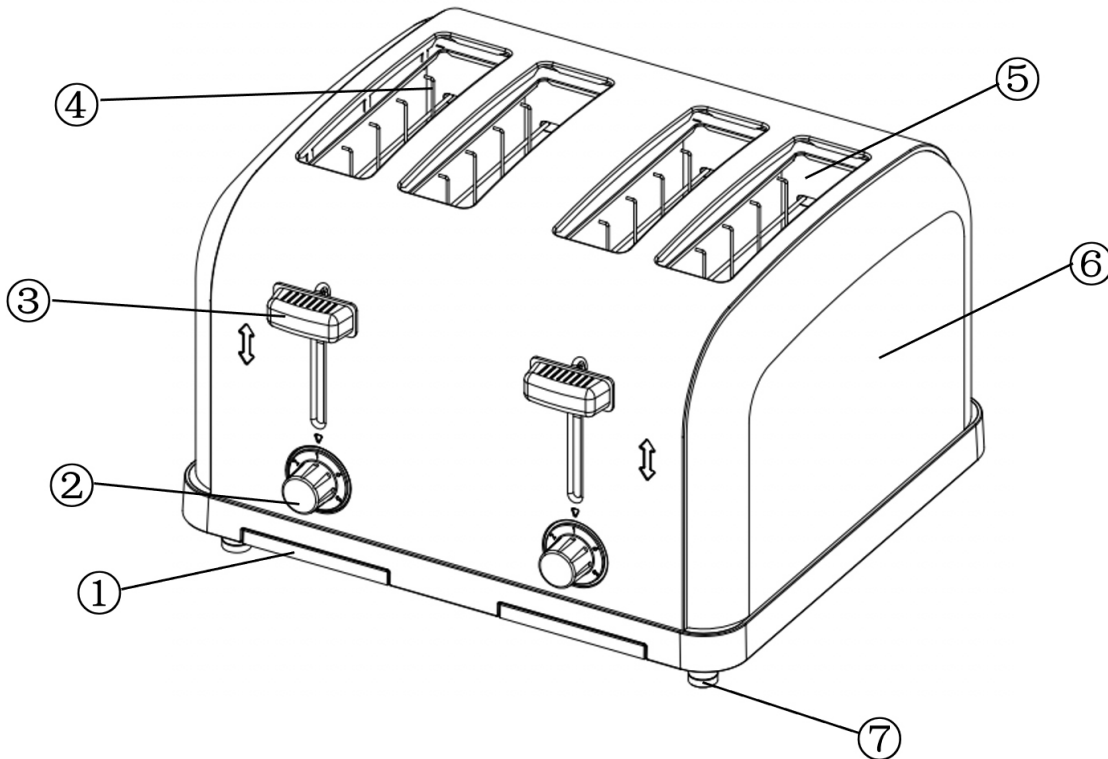

1. Crumb tray
2. Control knob
3. Lift Carriage
4. Left slots
5. Right Slots
6. Side board

# POP-UP TOASTER MANUAL

## Circuit DIAGRAM

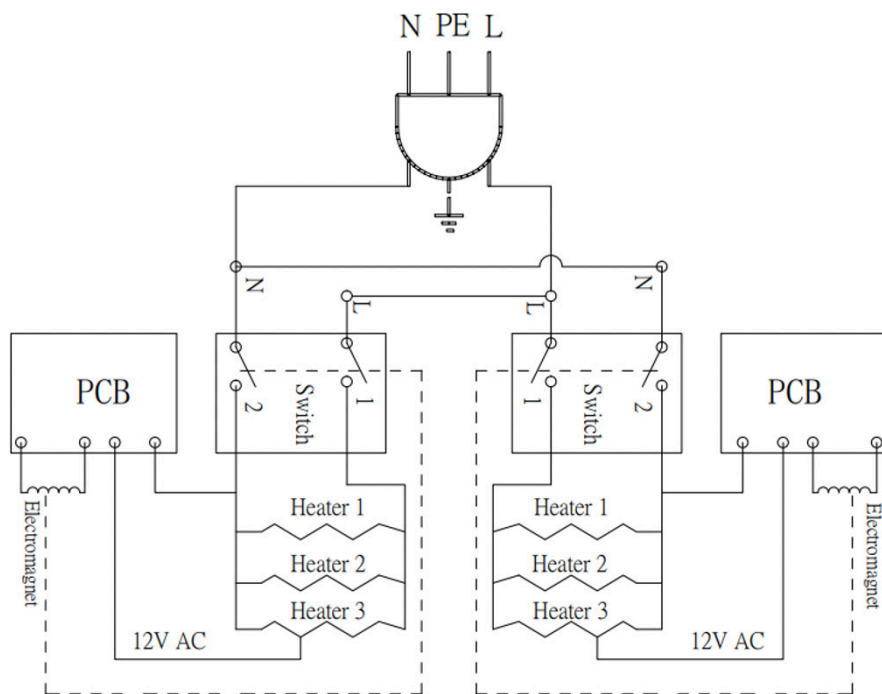

## SPECIFICATIONS

MODEL NO.	VOLTAGE/POWER	DIMENSIONS	UNIT WEIGHT	SHIPPING WEIGHT
29M-011	120V/60Hz/1800W	<u>12"W</u> x 10½"D x 7¾"H	6lbs	7.4lbs

# POP-UP TOASTER MANUAL

## Operation INSTRUCTIONS

### **BEFORE USING YOUR TOASTER**

1. Use a damp cloth to wipe exterior of the toaster
2. Do not use any sprays or abrasive cleaners
3. Do not immerse or wash the toaster with water
4. Preheat the toaster to the highest setting for 5 or more minutes.
5. Allow the lubricant to burn off the heating elements. A light amount of smoke is normal during this process.

### **USING YOUR TOASTER**

1. Plug in your toaster into the correct outlet and power light will come on
2. Load the bread into the slots
3. Set desired toast level ranging from 1 (very light) to 6 (dark)
4. Press the carriage knob down until it engages at the bottom; toasting begins.
5. Once complete, the toast will pop up automatically
6. If you need to cancel or stop toasting, you can raise up the lift knob to stop the toasting and remove the bread.

# POP-UP TOASTER MANUAL

## Cleaning INSTRUCTIONS

### Cleaning & Maintaining your Toaster

1. Unplug the unit and allow it to cool.
2. Use a damp cloth to gently wipe the exterior with non-abrasive cleaners.
3. Never soak the unit or allow it to immerse in water. This will cause serious damage and potential shock/injury.



# POP-UP TOASTER MANUAL

## Troubleshooting GUIDE

**PROBLEM: The toaster is not getting hot or toasting**

- Check that the browning knob is set to desired setting.
- Check to make sure the carriage knob is pressed down and engaged.

**PROBLEM: A metallic sound or buzzing is happening**

- DO NOT attempt to disassemble the oven. Unplug immediately.
- Contact customer service for next steps.

**PROBLEM: Toast is often burnt or overcooked.**

- Check that the browning knob is set to desired setting.
- Contact customer service if problem continues.

# POP-UP TOASTER MANUAL

## Warranty INFORMATION

### One-Year Limited Warranty

Kratos offers a one-year warranty to the original purchaser of new equipment. The unit will be free of defects in material and workmanship for a period of 1 year from the date of delivery. Warranty is not transferrable. Kratos, at its own discretion, will provide replacement components, replace the entire unit, or refund the purchase price to satisfy the warranty obligation. Kratos makes no other warranties, express or implied, statutory or otherwise, and hereby disclaims all implied warranties, including the implied warranties of merchantability and of fitness for a particular purpose.

The one-year limited warranty does not cover:

- Failure to install and/or use equipment within proper operating conditions as specified by Kratos.
- Outdoor use will void the warranty. The finish is not guaranteed in mobile applications where the oven can be damaged due to improper securement.
- Products that have been modified, abused, or misused. Any products that have been exposed to corrosive or other cleaners not intended for use on stainless steel will void the warranty.
- Any products sold outside the continental United States.
- Any products where the original sale cannot be determined. No order number, invoice, or receipt to provide proof of purchase will void any warranty coverage.
- Labor or service not authorized by Kratos is not covered under this warranty.
- Freight damage must be reported at the time of delivery and addressed with the carrier for compensation.
- Kratos will not be liable for any parties that experience loss of product, consequential damage, lost business or any other expenses.
- Defects, or damage due to improper maintenance, wear and tear, abuse, misuse, vandalism, or natural disasters.

#### For Warranty Inquiries

To obtain warranty information or make a claim against this warranty, please contact the location where you purchased the product.

If purchased on [www.centralrestaurant.com](http://www.centralrestaurant.com), call **800-215-9293** or email **[sales@centralrestaurant.com](mailto:sales@centralrestaurant.com)**.