Hand Wash Timer | HWT-20





/// Prevent the spread of germs and infectious disease when handling food product and promote safe cleaning practices with the Hand Wash Timer.

For more than 10 years, the Hand Wash Timer by Antunes has been helping foodservice operations encourage safe cleaning habits worldwide. The HWT displays a repeating 20-second countdown to provide a visual reminder of the recommended time for properly washing hands. It is touchless and requires no user intervention to operate or activate, and it helps employees and reminds customers to conform to health and safety requirements while also demonstrating a commitment to safe cleaning practices.



HWT-20

FEATURES:

- **///** Entirely touchless function.
- /// Continuous 20-second countdown.
- /// Runs on two AA batteries with an estimated operating life of three years.
- /// Attaches to any surface mounting kit with adhesive included.
- **///** Encourages safe cleaning habits to prevent the spread of infectious diseases.
- /// No user intervention required to operate or activate the timer.
- /// Helps employees conform to the HACCP safety requirements.
- /// Assures customers that your employees have a procedure for healthy standards.
- **///** Demonstrates to local health inspectors your commitment to safe cleaning practices in the restaurant.

The Correct Way to Wash Hands:

- 1. Wet hands and apply liquid soap.
- 2. Rub hands vigorously together and scrub all surfaces.
- 3. Continue until the Hand Wash Timer completes a full cycle. The soap combined with vigorous scrubbing helps dislodge and remove germs.
- 4. Rinse thoroughly and dry hands with a clean towel.

/// Hand Wash Timer | HWT-20

Specifications							
Model & Mfg. No.	Electrical	Cycle Time	Width	Depth	Height	Shipping Weight	
HWT-20 9900640	Two AA batteries with an estimated operating life of 3 years	20 seconds	6" (152 mm)	1 1/4" (32 mm)	4" (102 mm)	1 lb. (0.5 kg)	
			*Dimension	*Dimensions are for item without shipping box. Shipping weight includes item and shipping box.			

Follow these instructions for mounting the timer, changing

Mounting the Hand Wash Timer

Operation

The Hand Wash Timer will mount directly to any flat steel surface with the magnetic backing.

the batteries, and using the timer to properly wash hands.

- /// Note: Thoroughly clean the surface where the Timer is to be mounted before proceeding. Observe the proper cleaning procedures as required. Mount the Hand Wash Timer in the location that best suits your operation.
- If desired, use the Universal Mounting Bracket by carefully peeling the backing from the adhesive and secure the Universal Bracket to the chosen mounting surface.
- /// **Note**: Thoroughly clean the surface where the Timer is to be mounted before proceeding. Observe the proper cleaning procedures as required. Mount the Hand Wash Timer in the location that best suits your operation.
- 2) Attach the Hand Wash Timer to the Universal Bracket or directly to a magnetic surface.

Changing Batteries

The Hand Wash Timer comes with two AA batteries installed. These batteries have an estimated operating life of 3 years. In the event the batteries need to be changed, follow these steps:

- 1) Remove the four screws from the rear of the unit and remove the back panel.
- 2) Remove and properly recycle the two old AA batteries.
- **3)** Install two new AA batteries. The unit should begin to operate automatically.
- 4) Re-attach the back panel and secure with the four screws.



Antunes delivers a complete range of countertop cooking equipment and water filtration solutions to foodservice operations around the world. Learn more about Antunes and its products at antunes.com.

Corporate Headquarters Carol Stream, IL, USA Phone: +1.630.784.1000 Toll Free: +1.800.253.2991 China Facility
Suzhou, China
Phone: +84.512.6841.3637
Fax: +86.512.6841.3907

India Facility
Chennai, India
Phone: +91.44.25532212
Fax: +91.44.25532415

Proper Hand Washing Technique

- 1) Wet hands and apply liquid soap.
- 2) Rub hands vigorously together and scrub all surfaces.
- **3)** Continue until the Hand Wash Timer completes a full cycle. The soap combined with vigorous scrubbing helps dislodge and remove germs.
- 4) Rinse thoroughly and dry hands with a clean towel.

Cleaning the Timer

To clean the timer, wipe it lightly using a clean, dry towel. Do NOT submerse the timer in water. Do NOT wash it in a dishwasher. This will void the warranty.

Questions about the Timer?

If you experience any problem with your Hand Wash Timer, contact the manufacturer immediately at +1.877.392.7854 (Toll free in U.S. and Canada) or at +1.630.784.1000 (outside U.S. and Canada).