



6940E673 Rim Plate D 12 1/4"  
6940E674 Rim Plate D 11"  
6940E682 Rim Plate D 10 1/4"  
6940E675 Rim Plate D 9 1/2"  
6940E676 Rim Plate D 8 1/2"  
6940E681 Rim Plate D 7 1/2"  
6940E677 Rim Plate D 6 1/4"



6940E6042  
Form Plate  
D 9"



6940E679 Rim Soup Plate  
D 9 1/2" H 1 5/8" (12 oz)  
6940E6050 Rim Pasta Bowl  
D 11" H 1 3/4" (16 oz)



6940E680  
Presentation Bowl  
D 11 1/2" H 2" (17 oz)



6940E639  
Flared Serving Bowl  
D 11" H 2 7/16" (53 oz)  
6940E670  
Flared Serving Bowl  
D 9 1/2" H 2 1/2" (39 oz)



6940E651 Flared Bowl D 7 5/8" H 2 5/8" (33 oz)  
6940E636 Flared Bowl D 6" H 2 1/4" (16 oz)  
6940E637 Flared Bowl D 4 1/2" H 1 5/8" (6 1/2 oz)  
6940E638 Flared Bowl D 3" H 1 1/8" (2 1/2 oz)



6940E6049 Rim Fruit  
D 6 1/2" H 1 3/4" (8 1/2 oz)  
6940E6048 Rim Fruit  
D 5 1/4" H 1 1/4" (4 1/2 oz)



6940E609 Oval Sole Dish  
L 8 1/4" W 5 1/2" H 1 3/4" (23 oz)  
6940E608 Oval Sole Dish  
L 6 3/8" W 4 1/4" H 1 3/8" (10 1/2 oz)



6940E624 Casserole Base  
D 8 3/4" H 3 3/4" (75 oz)  
6940E625 Lid For Casserole



6940E622  
Soup Bowl Base  
L 6 1/4" H 4 7/8" (16 oz)  
6940E623 Soup Bowl Lid



6940E611  
Oval Baker  
L 6" W 4 1/8" H 1 3/4" (13 oz)



6940E6015  
Stack Soup Cup  
D 4 1/4" H 2" (10 oz)  
6940E6016 Saucer  
D 6 1/2" D/W (For E6015)



6940E6020 Stack Cup W 5" H 2 1/2" (10 oz)  
6940E689 Stack Cup (7 oz) L 4 3/8" W 3 3/8" H 2 1/4"  
6940E690 Saucer D 6" (For E689)  
6940E6016 Saucer D 6 1/2" D/W (For E689, E6020)  
6940E6021 Stack Cup W 3 1/2" H 2" (3 1/2 oz)  
6940E687 Saucer D 4 5/8" (For E6021)



6940E672  
Stack Mug  
L 4 1/4" H 3 3/4" (10 1/2 oz)



6940E6036 Tea Pot W/Lid  
L 9" W 5 3/4" H 5 3/4" (40 1/2 oz)  
6940E6037 Lid Replacement D 2 3/8" (For E6036)  
6940E6034 Tea Pot W/Lid  
L 6 5/8" W 4 1/4" H 4 1/2" (17 1/2 oz)  
6940E6035 Lid Replacement D 1 3/4" (For E6034)



6940E6038  
Gravy Boat  
L 8 1/2" W 3 1/4" H 3"  
(12 1/2 oz)



6940E646  
Sugar Bowl  
L 4" W 3" H 1 3/4"  
(6 oz)



6940E647  
Creamer U/H  
L 2 7/8" W 2"  
(5 oz)



6940E6039  
Salt Shaker (1 Hole)  
L 2" W 1 5/8" H 2 5/8"  
6940E6040  
Pepper Shaker (3 Holes)  
L 2" W 1 5/8" H 2 5/8"

D=Diameter L=Length W=Width H=Height • All Products are Measured at Max Capacity (oz)

All products are subject to availability. For further details of items available in each pattern, please refer to the latest price list or contact your customer service representative.