



new
Flat Rim Plate
6940E673 D 12 1/4" 6940E676 D 8 1/2"
6940E674 D 11" 6940E681 D 7 1/2"
(Plate Cover 5379S785) 6940E677 D 6 1/4"
6940E682 D 10 1/4" 6940E6071 D 5 3/4"
6940E675 D 9 1/2"



new
Banquet Rim Plate
6940E6052 D 11"
(Plate Cover 5379S804)



Form Plate
6940E6042 D 9"



new
Rimmed Platter
6940E6063 L 14 1/8" W 9 3/4"
6940E6076 L 12 1/2" W 8 1/4"
6940E6077 L 10 3/4" W 7 1/8"
6940E6078 L 9" W 6"



Presentation Bowl
6940E680 D 11 1/2" H 2" (17 oz)



Rim Pasta Bowl
6940E6050 D 11" H 1 3/4" (16 oz)
(Plate Cover 5379S804)
Rim Soup Plate
6940E679 D 9 1/2" H 1 5/8" (12 oz)



Rim Fruit
6940E6049
D 6 1/2" H 1 3/4" (8 1/2 oz)
6940E6048
D 5 1/4" H 1 1/4" (4 1/2 oz)



new
Lion Head Soup Bowl
6940E6067
L 5 3/8" W 4 3/4" H 3 3/8" (18 oz)
6940E6082
L 4 5/8" W 4 1/8" H 3" (12 oz)
6940E6083
L 4 1/8" W 3 1/2" H 2 5/8" (6 oz)



Oval Sole Dish
6940E609
L 8 1/4" W 5 1/2" H 1 3/4" (23 oz)
6940E608
L 6 3/8" W 4 1/4" H 1 3/8" (10 1/2 oz)



Casserole Base
6940E624
D 8 3/4" H 3 3/4" (75 oz)
Lid For Casserole
6940E625



Soup Bowl Base
6940E622
L 6 1/4" H 4 7/8" (16 oz)
Soup Bowl Lid
6940E623



Oval Baker
6940E611
L 6" W 4 1/8" H 1 3/4"
(13 oz)



Stack Soup Cup
6940E6015
D 4 1/4" H 2" (10 oz)
Saucer Double Well
6940E6016
D 6 1/2" (Fits E6015)



Stack Cup
6940E6020 L 5" H 2 1/2" (10 oz)
6940E689 L 4 3/8" W 3 3/8" H 2 1/4" (7 oz)
6940E6021 L 3 1/2" H 2" (3 1/2 oz)
Saucer
6940E690 D 6" (Fits E689)
6940E6016 D 6 1/2" Double Well (Fits E689, E6020)
6940E687 D 4 5/8" (Fits E6021)



Stack Mug
6940E672
L 4 1/4" H 3 3/4"
(10 1/2 oz)



Tea Pot W/Lid
6940E6036
L 9" W 5 3/4" H 5 3/4" (40 1/2 oz)
6940E6034
L 6 5/8" W 4 1/4" H 4 1/2" (17 1/2 oz)
Lid Replacement
6940E6037 D 2 3/8" (For E6036)
6940E6035 D 1 3/4" (For E6034)



Gravy Boat
6940E6038
L 8 1/2" W 3 1/4" H 3"
(12 1/2 oz)



new
Souffle Ramekin
6940E6069
D 4" H 2 1/8" (8 3/4 oz)
Underliner
6940E6070 D 8" (Fits E6069)



new
Ramekin
6940E6085
D 3 1/8" H 1 5/8" (4 oz)
6940E6084
D 2 3/8" H 1 1/4" (2 oz)



Sugar Bowl
6940E646
L 4" W 3" H 1 3/4"
(6 oz)



new
Handled Creamer
6940E6074
L 4 1/8" H 2 7/8"
(6 oz)
6940E6073
L 3 1/8" H 2 1/2"
(3 1/2 oz)



Creamer Unhandled
6940E647
L 2 7/8" W 2"
(5 oz)



new
Salt Shaker (1 Hole)
6940E6039
L 2" W 1 5/8" H 2 5/8"
Pepper Shaker (3 Holes)
6940E6040
L 2" W 1 5/8" H 2 5/8"
Stopper Replacements
6940E6086