



Casserole  
**11010337** (104 oz)  
**11010334** (75 oz)  
 Casserole Lid  
**11010338** (Fits 0337)  
**11010335** (Fits 0334)



Oblong Roaster  
**11010331** L 14" W 12" (125 oz)  
**11010342** L 12" W 10" (80 oz)



Square Roaster  
**11010329** L W 10" (65 oz)



Oval Eared Dish  
**11010321** L 13 1/2" W 7 1/2" (36 1/2 oz)  
**11010320** L 12" W 6 1/2" (27 1/2 oz)  
**11010319** L 9 1/2" W 5 1/2" (12 1/2 oz)  
**11010318** L 8" W 4 1/2" (6 1/2 oz)



Presentation Pan  
**11010866** D 10" (33 1/2 oz)



Round Eared Dish  
**11010317** L 8 1/2" (27 1/2 oz)  
**11010316** L 7 1/2" (19 oz)  
**11010191** L 5 3/4" (6 1/2 oz)



Oval Sole Dish  
**11010326** L 11" W 7 1/2" (52 oz)  
**11010327** L 8 1/2" W 5 1/2" (19 oz)  
**11010315** L 6 1/4" W 4 1/2" (10 1/2)



Soup Bowl Covered Complete  
**11010828** D 4 7/8" L 6 1/4" H 3" (15 oz)  
**11010829** Cover for Soup Bowl  
 Soup Bowl Base  
**1101B828** D 4 7/8" L 6 1/4" H 2 1/4" (15 oz)



Oval Baker  
**11010400** L 6 1/4" H 2" (13 oz)



Oval Baker Lipped  
**11010328** L 6 1/4" (13 oz)



Rectangular Tray  
**11010366** L 6 1/2" W 4 3/4" (17 1/2 oz)



Stacking Bowl  
**11010308** D 8 1/4" H 3" (68 oz)  
**11010309** D 6 5/8" H 2 3/8" (31 oz)  
**11010310** D 5" H 1 7/8" (13 oz)



Decanter  
**11010282** L 7 1/2" H 19 3/8" (32 oz)  
**11010283** L 5 7/8" H 9" (16 oz)



Butter Block  
**11010332** H 1/2" (1 oz)



Ramekin  
**11010324** D 3 1/4" H 1 7/8" (5 oz)  
**11010323** D 3" H 1 3/4" (3 oz)  
**11010322** D 2 1/2" (2 1/2 oz)