



Coupe Bowl
6314P1053 D 10 1/4" H 1 3/4" (34 oz)
6314P1054 D 8 1/4" H 1 5/8" (19 oz)
6314P1055 D 6" H 1 1/2" (10 oz)



Signature Gourmet Bowl
6314P1003 D 10 5/8" H 2 1/8" (5 1/2 oz)
 (Plate Cover 5379S786)
6314P1004 D 9 1/4" H 2" (2 3/4 oz)
6314P1009 D 4" H 3/4" (2 3/8" Well) (1/2 oz)



Rimmed Soup/Pasta Bowl
6314P1016 D 10 5/8" H 1 5/8" (13 oz)
 (Plate Cover 5379S786)
6314P1017 D 9" H 1 1/8" (8 oz)



Signature Gourmet Bowl
6314P1006 D 6 1/4" H 1 1/2"
 (2 3/8" Well) (1 1/2 oz)
6314P1007 D 6 1/4" H 1 1/8"
 (2 3/4" Well) (1 1/2 oz)



Rimmed Fruit Bowl
6314P1029
 D 8 1/4" H 2 7/8" (15 1/4 oz)
6314P1030
 D 7" H 2 3/4" (10 oz)



Signature Gourmet Bowl Tall
6314P1008
 D 3 7/8" H 2 5/8" (2 1/2 oz)



Cappuccino Cup
6314P1032
 L 5 1/2" H 2 3/4" (12 1/2 oz)
 Saucer
6314P1033 D 7"



Cup
6314P1034 Coffee L 4 5/8" H 2 7/8" (9 oz)
6314P1035 Tea L 5" H 2 1/8" (8 oz)
6314P1037 Espresso L 3 1/2" H 2 3/8" (3 1/2 oz)
 Saucer
6314P1036 D 6 1/2" (Fits P1034, P1035)
6314P1038 D 5 1/4" (Fits P1037)



Stack Cup
6314P1044 Coffee L 4 1/2" H 2 3/4" (9 oz)
6314P1047 Espresso L 3 1/2" H 2 3/8" (4 oz)
 Saucer
6314P1036 D 6 1/2" (Fits P1044)
6314P1038 D 5 1/4" (Fits P1047)



Stack Bouillon Cup
6314P1040 Handled L 6 1/4" H 2 3/8" (12 3/4 oz)
6314P1062 Unhandled D 4 3/8" H 2 3/8" (12 3/4 oz)
 Saucer
6314P1033 D 7"



Handled Bouillon Cup
6314P1031 L 6 5/8" H 2 3/4" (12 oz)
 Saucer
6314P1033 D 7"



Cereal Bowl Unembossed
6306P765 D 4 7/8" H 2 1/8" (14 1/2 oz)
 Saucer
6314P1033 D 7"



Bouillon Cup Unembossed
6306P763 D 4" H 2 1/2" (11 1/4 oz)
 Saucer
6314P1033 D 7"



Stack Mug
6314P1052
 L 4 3/8" H 4" (10 1/4 oz)



Teapot W/Lid
6314P1056 L 7 1/2" H 4 1/2" (18 1/2 oz)
 Lid
6314P1058



Sugar Bowl W/Lid
6314P1063 L 5 3/4" H 3 3/8" (9 oz)
 Lid
6314P1064



Creamer Handled
6314P1060 L 5" H 3 1/2" (8 oz)
6314P1061 L 4 1/4" H 2 7/8" (6 oz)