



Deep Coupe Bowl  
**6300P070** D 12" H 2" (74 oz)  
**6300P071** D 11 1/4" H 2" (54 oz)  
 (Plate Cover 5379S784)  
**6300P072** D 9" H 1 3/4" (32 oz)



Laksa Bowl  
**6300P050** D 9 3/4" H 3 1/2" (16 oz)  
**6300P051** D 8" H 3" (7 oz)



Bowl  
**6300P044** D 7 7/8" H 3 3/8" (33 oz) (fits Cloche P045)  
**6300P043** D 6 5/8" H 2 3/4" (19 oz) (fits Cloche P042)  
**6300P040** D 5 1/2" H 2 3/8" (10 oz) (fits Cloche P041)  
 Soup Bowl Underliner  
**6300P239** (Fits 6300P044)  
**6300P184** (Fits 6300P040)  
**6300P239** (Fits 6300P043)



Noodle Bowl  
**6300P049** D 9" H 3 3/8" (32 oz)



**6300P054** Soup Plate  
 D 11 5/8" H 2" (12 oz) (fits Cloche P066)  
**6300P066** Cloche (Fits P054)



Cream Soup  
**6300P064** Handled L 6 1/4" H 2 1/2" (10 oz)  
**6300P069** Unhandled L 4 5/8" H 2 1/2" (10 oz)  
 Saucer  
**6300P457** Aura Universal Saucer D 6 1/2"  
 (Fits P064, P069, P171, 174)  
**6300P182** D 7" (Fits P064, P069, P151)



Rim Soup  
**6300P065** D 9 1/2" H 1 5/8" (18 oz)



Soup Cereal Bowl  
**6300P055** D 7" H 2 1/8" (10 oz)



*new*  
 Stack Bouillon  
**6300P075** D 3 1/4" H 2 5/8" (8 oz)  
 Saucer  
**6300P180** D 6 1/4"



Rice Bowl  
**6300P350** D 4 1/2" H 2 1/4" (10 oz)  
**6300P351** D 4 1/8" H 2 1/8" (8 1/2 oz)  
 Coupe Saucer  
**6300P352** D 6 1/2"



Footed Bowl  
**6300P067**  
 D 5 1/8" H 2 1/8" (12 oz)



Sugar Bowl  
**6300P151** D 4 1/4" H 2" (8 oz)  
 Sugar Bowl Saucer  
**6300P182** D 7" (Fits P151, P064, P069)



Slant Bowl  
**6300P248**  
 D 3 1/2" H 2" (2 oz)  
 (fits Rect. Tray P249)



Sauce Dish  
**6300P162**  
 D 4 1/4" H 7/8" (2 3/4 oz)



Coupe Sauce Dish  
**6300P353**  
 Large D 4 3/8" H 1 1/8" (3 1/2 oz)  
**6300P354**  
 Small D 3 1/2" H 1" (1 oz)



Sauce Bowl  
**6300P255**  
 D 3" H 7/8" (1/2 oz)



Sauce Dish  
**6300P256**  
 D 3" H 3/4" (1/2 oz)



Spoon  
**6302P247** L 5 1/8"  
 Spoon Rest  
**6300P357**  
 (Fits 6302P247)