



Teacup Unhandled  
**6300P144**  
D 3 1/4" H 2 3/8" (5 1/2 oz)



Small Sauce Pot  
**6300P257**  
D 1 3/4" H 1 7/8" (2 oz)



Soy Sauce/Vinegar Pot w/Lid  
**6300P370**  
L 3 5/8" H 4 3/8" (4 1/2 oz)  
Lid  
**6300P389**



**6300P366**  
Chili Bowl w/lid  
D 3" H 2 1/8" (3 1/2 oz)  
Lid  
**6300P367**



Small Spice Spoon  
**6300P368**  
L 4 1/2"



Chop Stick Rest  
**6300P359**  
L 2 3/4" W 1/2"



Olive Oil Dish  
**6300P113**  
L 4 1/4" W 2 7/8"



Sugar Packet Holder  
**6300P114**  
L 4 1/8" W 2 7/8" H 2 1/8" (6 oz)



Round Tray  
**6300P068**  
D 5 3/4" H 1"



Salt (1 hole) **6300P160**  
Pepper (5 hole) **6300P161**  
Stopper Replacement  
**6300P163**



Unhandled Creamer  
**6300P149** L 3 1/4" H 2 7/8" (5 oz)  
**6300P150** L 2 1/2" H 2 3/8" (2 oz)  
**6300P147** L 1 1/2" H 1 5/8" (1/2 oz)



Coffee Pot w/lid  
**6300P154** L 8 3/4" H 7 1/8" (22 oz)  
**6300P152** L 7 7/8" H 5 3/4" (12 oz)  
Lid  
**6300P159** (Fits 6300P154)  
**6300P157** (Fits 6300P152)



Tea Pot w/lid  
**6300P155** L 9 1/8" H 5 7/8" (20 oz)  
**6300P153** L 8 1/4" H 5 1/4" (15 oz)  
Lid  
**6300P199** (Fits 6300P155)  
**6300P197** (Fits 6300P153)



Handled Creamer  
**6300P148**  
L 5" H 3 3/8" (8 1/2 oz)



Can Cup  
**6300P190**  
L 4" H 3" (8 oz)



Stacking Mug  
**6300P194**  
L 4 5/8" H 4 1/2" (15 1/4 oz)  
**6300P193**  
L 4 1/2" H 3 7/8" (10 1/4 oz)



Tall Cup  
**6300P189** L 4 5/8" H 2 3/8" (5 oz)  
Saucer  
**6300P183** D 6 1/2" (Fits P186, P189, P192)  
**6300P180** D 6 1/4"



Stacking Cup  
**6300P186** L 4 1/8" H 2 5/8" (8 oz)  
Saucer  
**6300P183** D 6 1/2" (Fits P186, P189, P192)  
**6300P180** D 6 1/4"



Tea Cup  
**6300P192** L 4 1/2" H 3" (6 3/4 oz)  
Saucer  
**6300P183** D 6 1/2" (Fits P186, P189, P192)



AD Cup  
**6300P187** L 3 5/8" H 2 1/8" (2 1/2 oz)  
AD Saucer  
**6300P181** D 4 5/8"



Mug  
**6300P191** L 4 7/8" H 3 3/4" (8 oz)  
Coupe Saucer  
**6300P363** D 6 1/2"



Low Cup  
**6300P171** Breakfast L 5 5/8" H 2 5/8" (13 1/2 oz)  
**6300P174** Coffee L 4 5/8" H 3" (8 1/2 oz)  
Saucer  
**6300P457** Aura Universal Saucer D 6 1/2" (Fits P171, 174, P064, P069)  
**6300P172** D 7 1/8" Fits P171)  
**6300P175** D 6 1/4" (Fits P174)



Low Cup AD  
**6300P176** (3 3/8 oz)  
Saucer  
**6300P177** D 5 3/4"