





CATALOG OF REPLACEMENT PARTS

VESTA SX36/SX60/SX60F RANGE

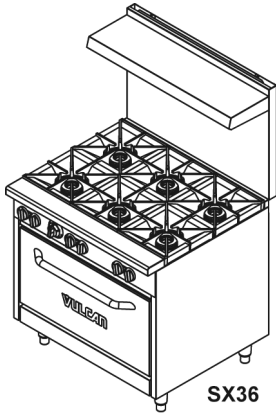


SX36

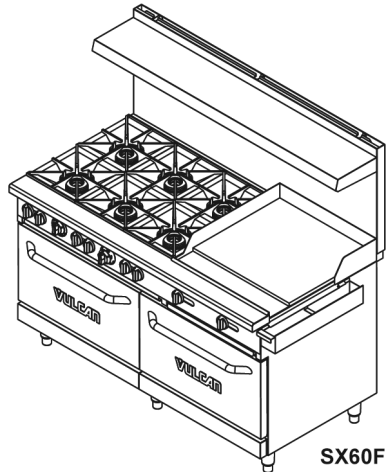


SX60F

Table of Contents

5	DOOR
7	COVERS (SX36)
9	COVERS (SX60 / SX60F)
11	OVEN
13	PIPING
15	GRIDDLE

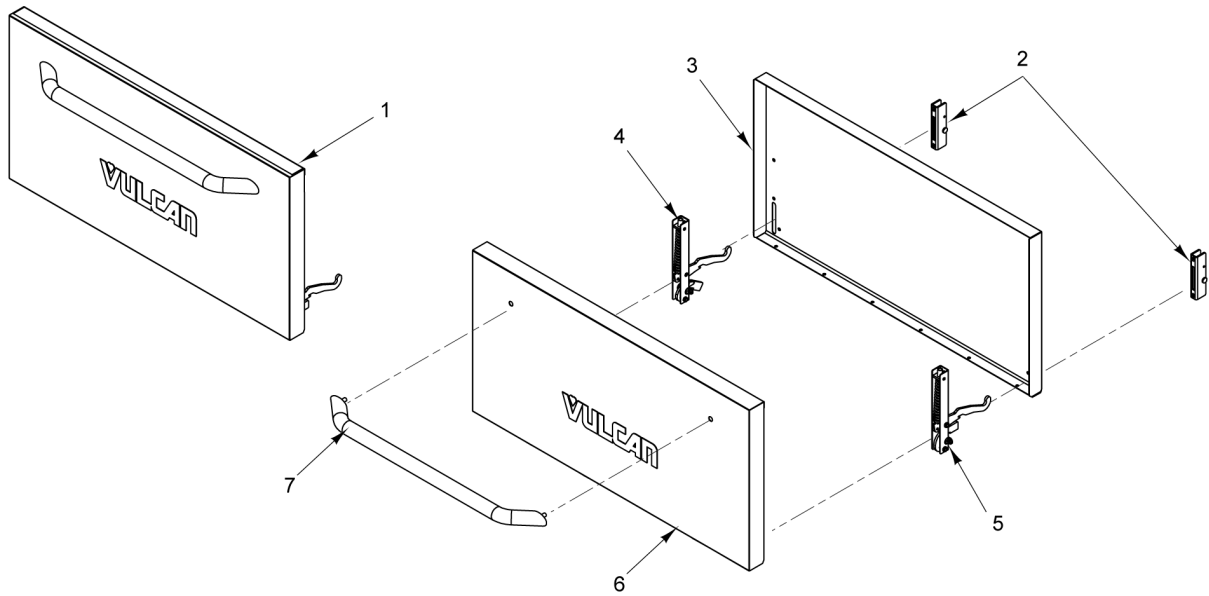

SX36

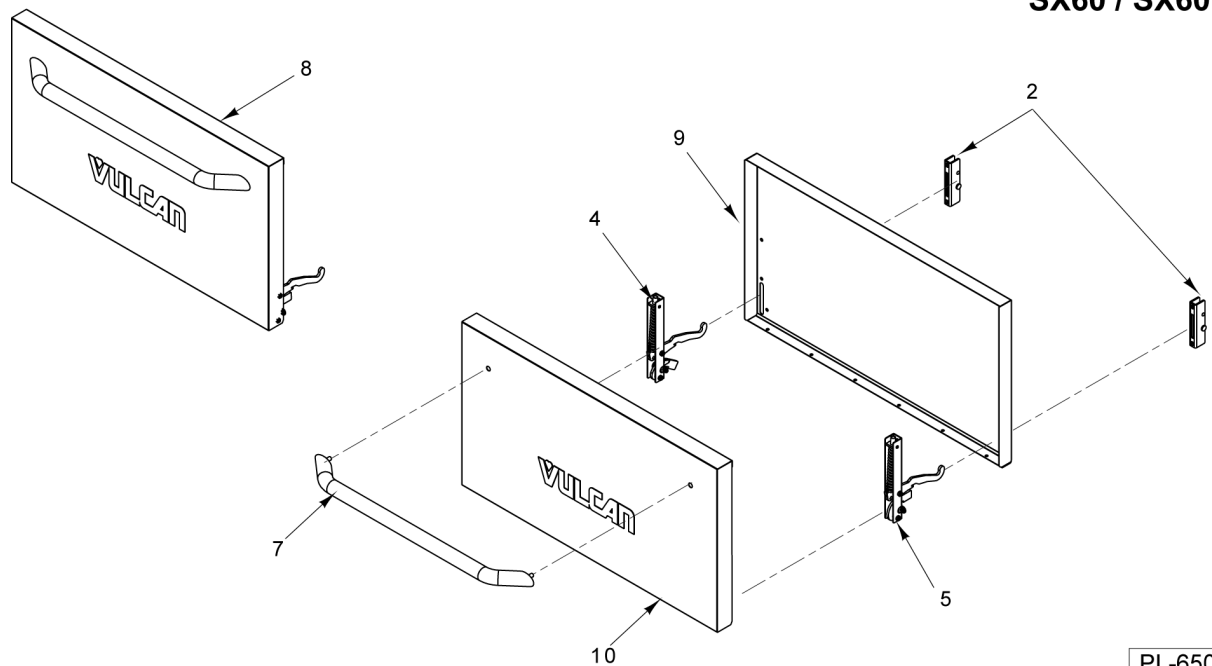


SX60 / SX60F

PL-65027

DOOR

DOOR

ILLUS.	PART NO.	NAME OF PART	AMT.
1	00-922448-0036A	Door Assy. (SX36).....	1
2	00-961331-00003	Stop - Door Hinge.....	2
3	00-922447-00036	Liner - Door (SX36).....	1
4	00-961331-00002	Hinge - LH Door.....	1
5	00-961331-00001	Hinge - RH Door.....	1
6	00-922441-00036	Panel - Door Outside (SX36).....	1
7	00-922423	Handle - Door.....	1
8	00-922448-0060A	Door Assy. (SX60).....	1
9	00-922447-00060	Liner - Door (SX60).....	1
10	00-922441-00060	Panel - Door Outside (SX60).....	1

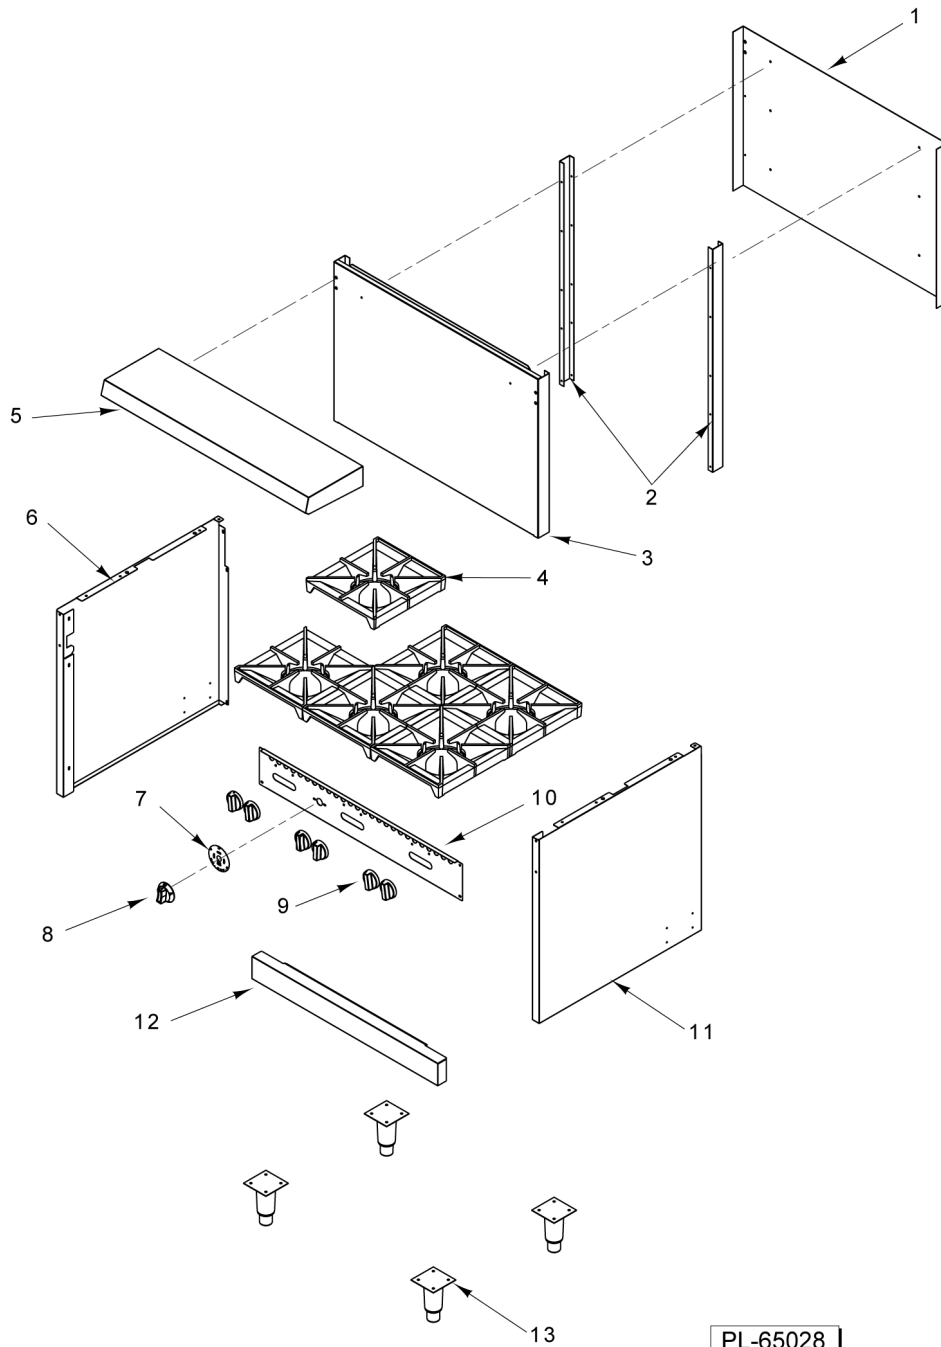


PL-65028

COVERS (SX36)

COVERS (SX36)


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-65028			
1	00-922436-00036	Riser - Back (Back Panel) (SX36).....	1
2	00-922438	Support - Back Riser.....	2
3	00-922437-00036	Riser - Back (Front Panel) (SX36).....	1
4	00-925000	Grate.....	6
5	00-922439-00036	Cover - Shelf (SX36).....	1
6	00-922440-00002	Panel - LH Side (SX36).....	1
7	00-922421	Plate - Dial.....	1
8	00-961412	Knob - Oven.....	1
9	00-961411	Knob - Open Top Burner.....	6
10	00-922446-00036	Panel - Front (SX36).....	1
11	00-922440-00001	Panel - RH Side (SX36).....	1
12	00-922435-00036	Lid - Front Lower (SX36).....	1
13	00-413112-00012	Leg (6 In.).....	4

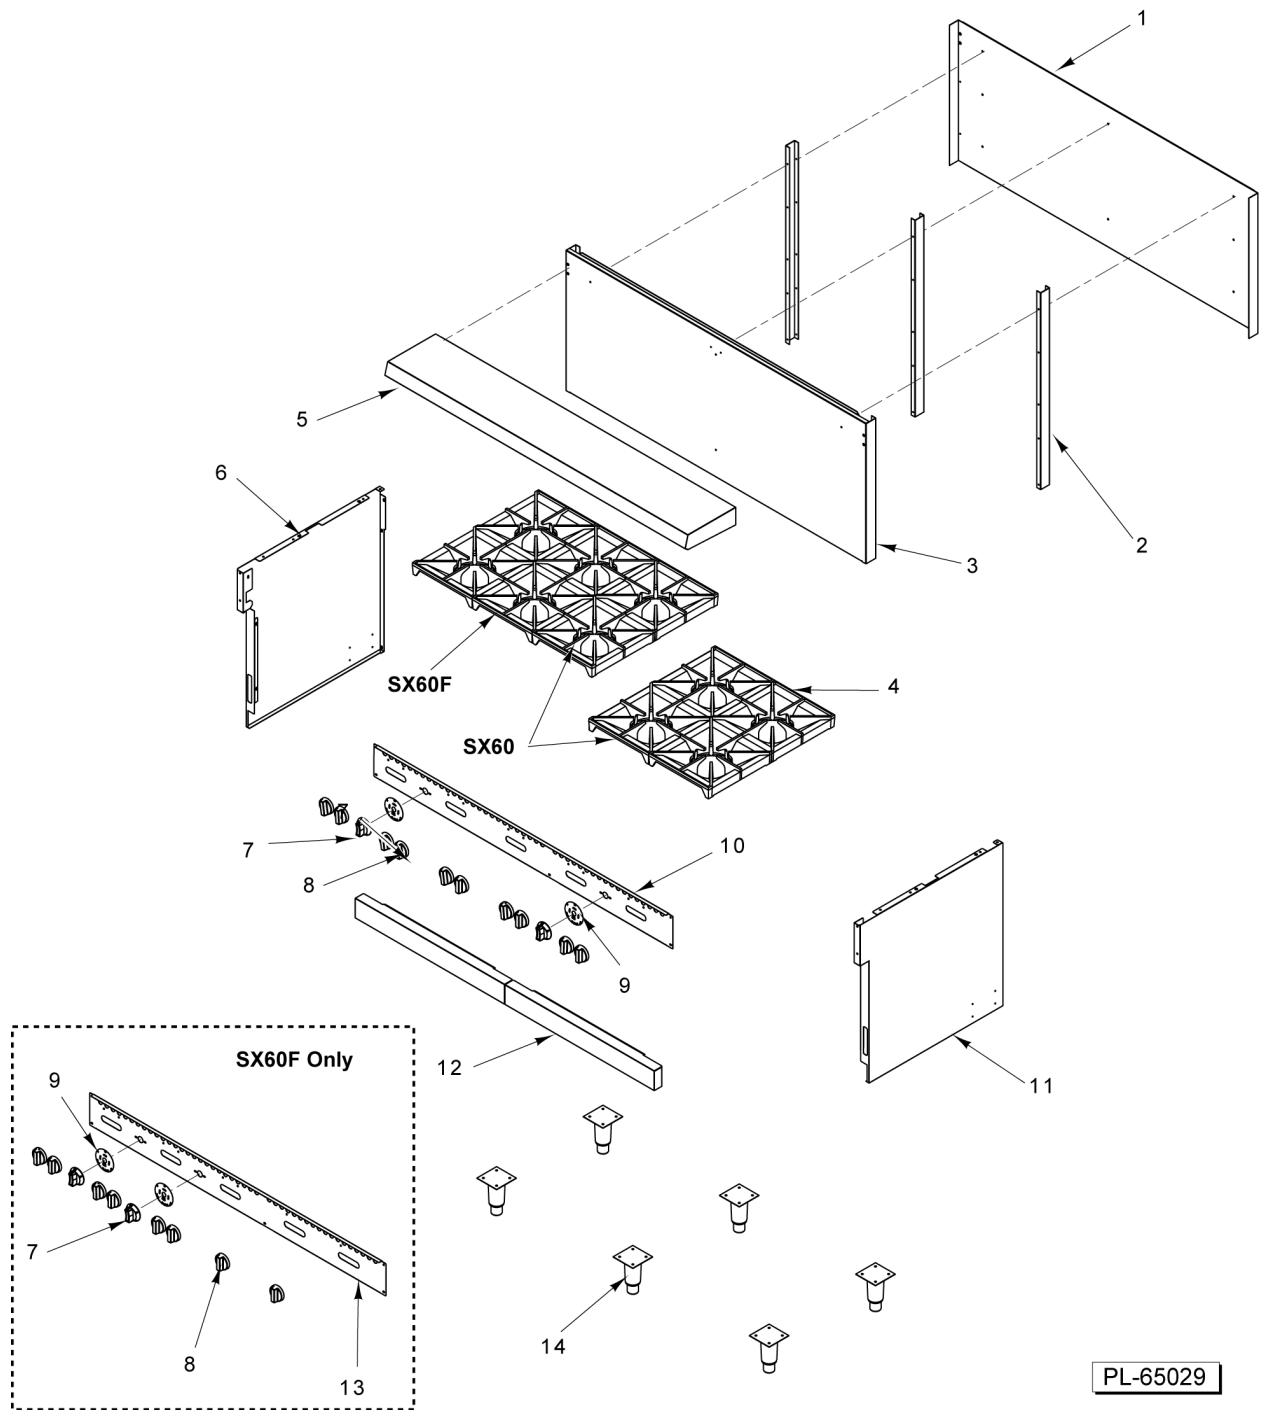

**COVERS
(SX60 / SX60F)**

**COVERS
(SX60 / SX60F)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-65029			
1	00-922436-00060	Riser - Back (Back Panel) (SX60).....	1
2	00-922438	Support - Back Riser.....	3
3	00-922437-00060	Riser - Back (Front Panel (SX60).....	1
4	00-925000	Grate.....	AR
5	00-922439-00060	Cover - Shelf (SX60).....	1
6	00-922442-00002	Panel - LH Side (SX60).....	1
7	00-961412	Knob - Oven.....	2
8	00-961411	Knob - Open Top Burner.....	AR
9	00-922421	Plate - Dial.....	2
10	00-922446-00060	Panel - Front (SX60).....	1
11	00-922442-00001	Panel - RH Side (SX60).....	1
12	00-922435-00060	Lid - Front Lower (SX60).....	2
13	00-922446-0060F	Panel - Front (SX60F).....	1
14	00-413112-00012	Leg (6 In.).....	6

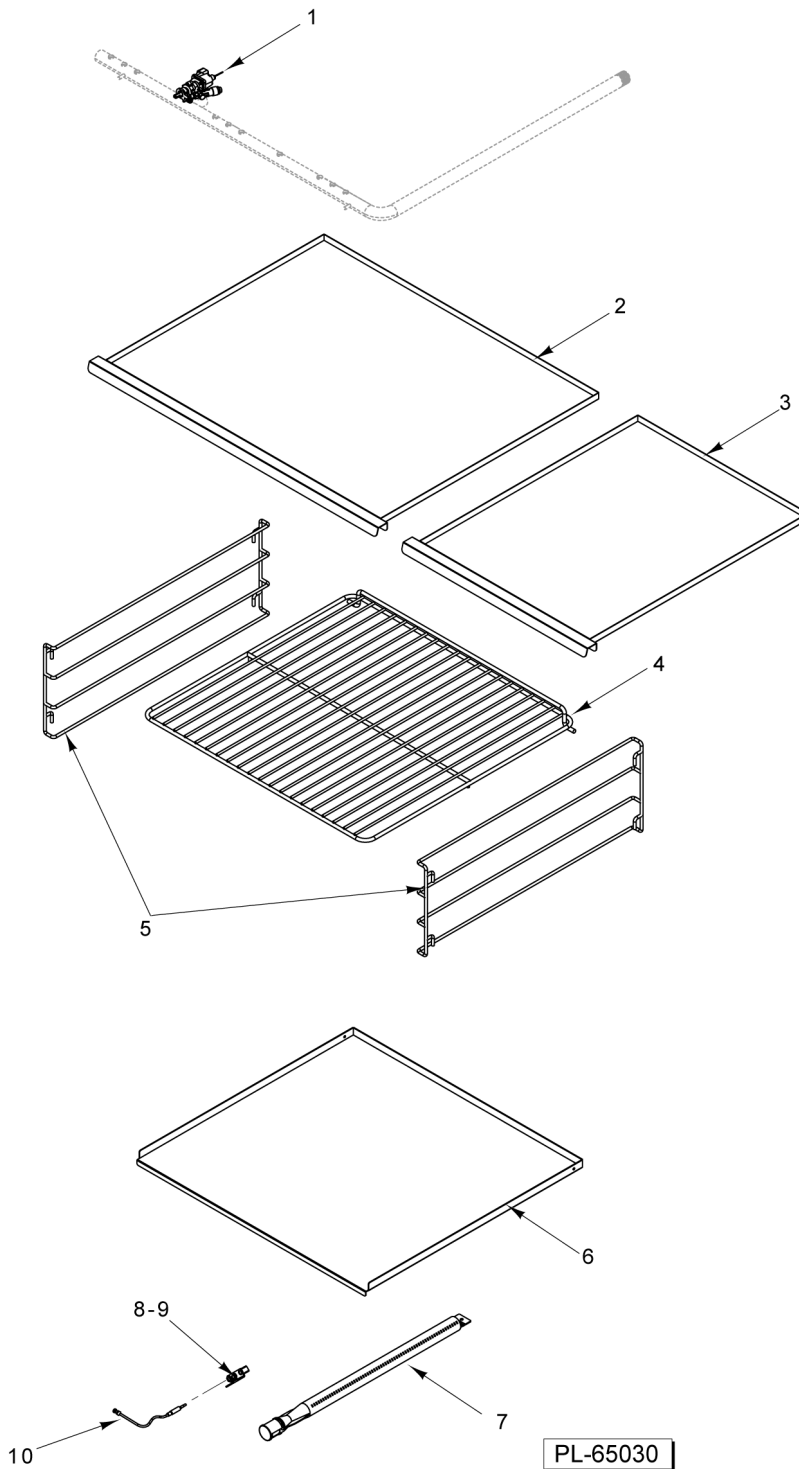


OVEN


OVEN

ILLUS.	PART NO.	NAME OF PART	AMT.
1	00-961330	Thermostat - SABAF.....	1
2	00-922431	Crumb Tray Assy.....	1
3	00-922432	Crumb Tray Assembly (SX60 Only).....	1
4	00-922424	Rack - Oven.....	1
5	00-922425	Support - Oven Rack.....	2
6	00-922429	Tray - Porcelian Oven.....	1
7	00-961332	Burner - Oven.....	1
8	00-412787-00001	Pilot - Oven (NAT).....	1
9	00-412787-00002	Pilot - Oven (LP).....	1
10	00-412788-00060	Thermocouple.....	1


SX60F

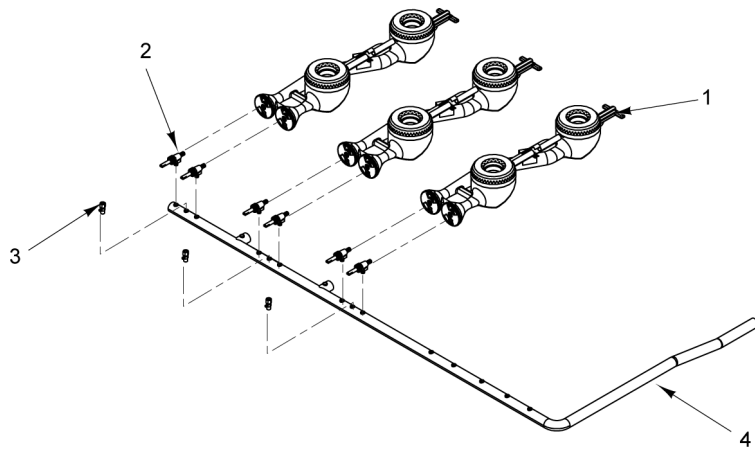

SX60

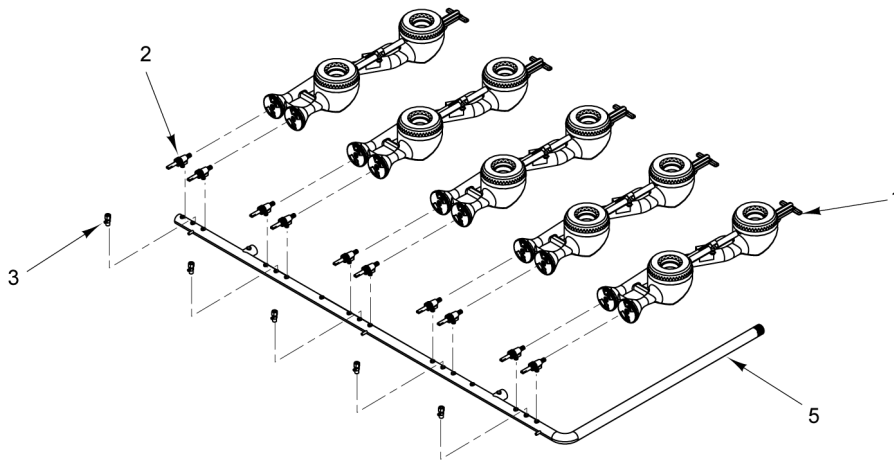

SX36

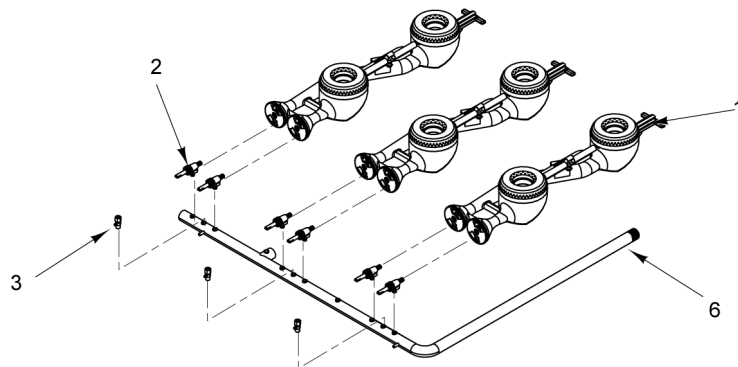


PL-65031

PIPING

PIPING

ILLUS. PL-65031	PART NO.	NAME OF PART	AMT.
1	00-928014-0000A	Body - Oven Top Burner.....AR	AR
2	00-961329	Valve - Gas.....AR	AR
3	00-922422	Valve - Oven Top Pilot.....AR	AR
4	00-922426	Manifold (SX60F).....1	1
5	00-922428	Manifold - Gas (SX60).....1	1
6	00-922427	Manifold - Gas (SX36).....1	1

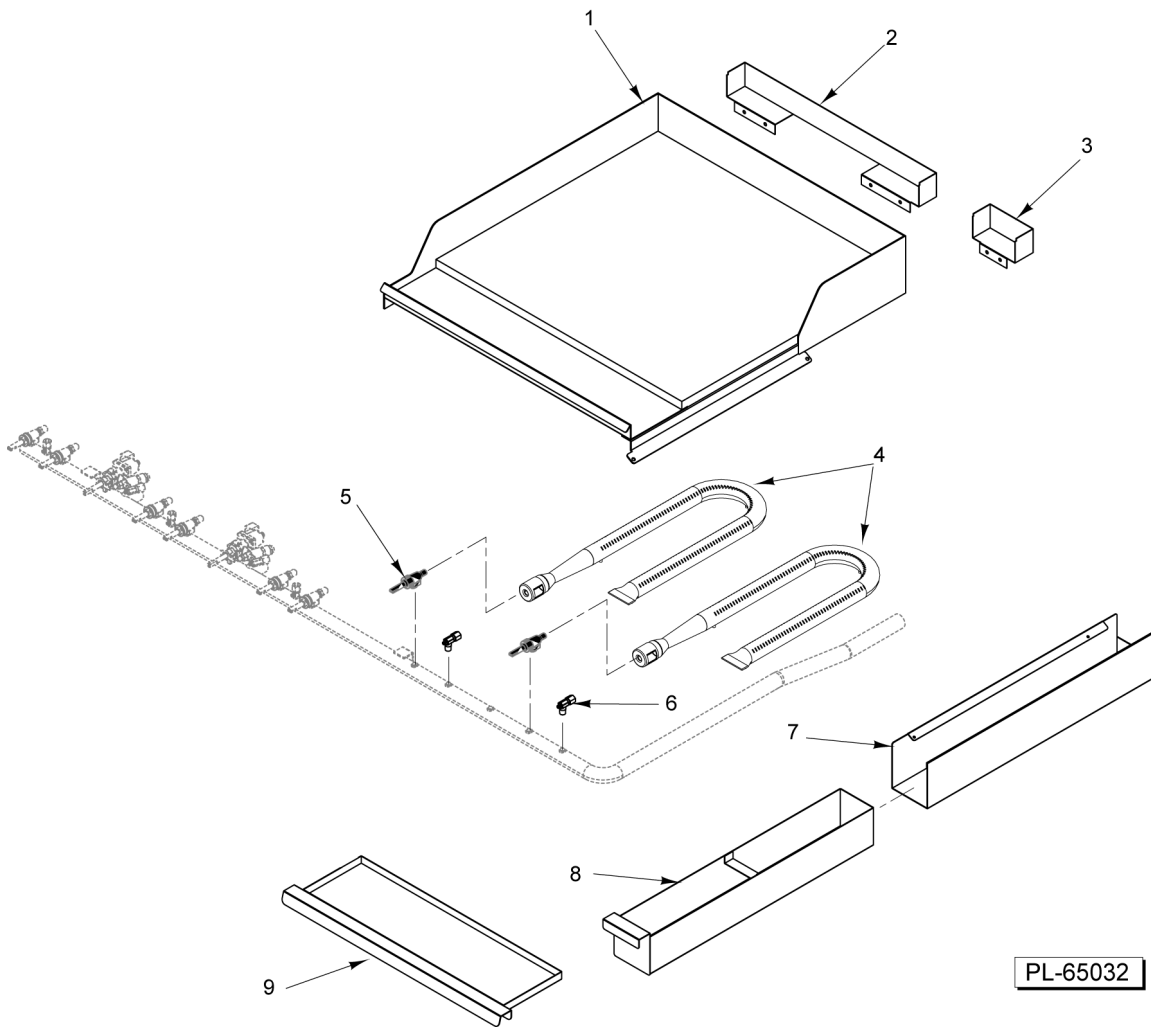

GRIDDLE

GRIDDLE

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-65032			
1	00-922434-0000A	Griddle Plate Assy.....	1
2	00-922444-00002	Box - Griddle Flue (Large).....	1
3	00-922444-00001	Box - Griddle Flue (Small).....	1
4	00-961413	Burner - Griddle.....	2
5	00-961329	Valve - Gas.....	2
6	00-922430	Valve - Griddle Burner Pilot.....	2
7	00-922443	Support - Griddle Front Crumb Tray.....	1
8	00-922433	Griddle Tray Assy.....	1
9	00-922445	Tray - Griddle Front Crumb.....	1

