PART #A213010

# Slanted Shelf / Suture Cart / **Merchandising Cart**

## **ASSEMBLY INSTRUCTIONS**

### CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. SAVE YOUR BOX AND ALL PACKING MATERIALS.

YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

### **Parts List**

#### 4-Shelf Unit:

(4) Posts

(4) Wire Shelves


- (6) Rails
- (4) Casters
- (2) 3-Sided Trusses (16) Split Sleeves

#### 5-Shelf Unit:

- (4) Posts (8) Rails
- (5) Wire Shelves
- (4) Casters (2) 3-Sided Trusses
  - (20) Split Sleeves



figure 1

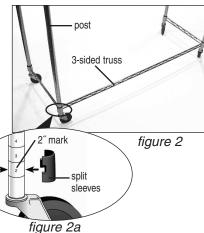

### Caster

Insert caster into bottom of each post as shown in *figure 1*.

# 3-Sided Truss

- A Posts are numbered in 1" increments. Snap split sleeves onto each post at the 2" mark as shown in figure 2a. The thicker part of the taper goes toward the bottom. Make sure rib in split sleeve is seated into groove on post.
- **B** Insert post through the collars of the 3-sided truss, and slide the truss down to the split sleeves. The wider part of the collar goes toward the bottom.

Note: Long truss of bottom 3-sided truss indicates the front of the unit.

#### 4-shelf unit 5-shelf unit 4th 4th front rail at rear rail at -50" mark 3rd 48" mark front rail at 3rd 44" mark rear rail at 3rd 3rd front rail at 40" markrear rail at 38" mark 36" mark -2nd front rail at 2nd 2nd ·30" mark rear rail at 2nd front rail at rear rail at 26" mark--26" mark 24" mark 1st 1st front rail at 1st 1st front rail at 16" mark rear rail at rear rail at -14" mark 12" mark-12" mark front of cart front of cart figure 3

# Rails

- **A** Assemble one rail at a time. Refer to *figure 3* for location of split sleeves and rails. Snap split sleeves onto number on each post (2 sets of split sleeves per rail).
- **B** Insert post through the rail collars and slide rail down to split sleeves. Make sure the wider part of the collar goes toward the bottom.
- **C** Repeat Steps 3a and 3b to assemble all rails. Refer to figure 3 for location of split sleeves and rails.

(continued on back page)


EG9802 Revised 11/07




- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A. www.eaglegrp.com
- Phone: 302/653-3000 (Foodservice) 800/441-8440 (MHC/Retail) 800/637-5100
- Fax: 302/653-2065

# Slanted Shelf / Suture Cart / Merchandising Cart

## **ASSEMBLY INSTRUCTIONS**



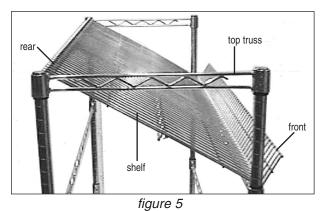

4 Top Truss

- A Snap split sleeves onto each post, as shown in *figure 4* for location of split sleeves and top 3-sided truss.
- **B** Position top truss OPPOSITE of bottom truss.
- C Insert posts through truss collars and slide truss down to split sleeves. The wider part of the collar goes toward the bottom.

## 5 Shelves

Note: Large upturn on shelf is located on the front of the unit.

- **A** Start with the bottom shelf. Hook shelf downturn over 1st rear rail (located at the 12" mark on post a shown in *figure 3*).
- **B** Rest front of shelf on front of bottom truss. Shelf should be approximately at a 30° angle as shown in *figure 5*.
- **C** Repeat Steps 5a and 5b to assemble all remaining shelves. **Note:** Downturn of topmost shelf should hook over top truss, as shown in *figure 5*.

# **Optional Dividers**

- To assemble the dividers, locate the two bottom tabs as shown in *figure 6*. Place divider on shelf with front tab of divider pointing toward the front upturn of shelf.
- Pull divider toward the front of the shelf. Both bottom tabs should catch the wire shelf as shown in *figure 7*.

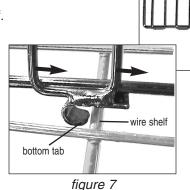


figure 6

bottom tabs

Clip the front tab over the wire shelf as shown in figure 8.

Divider assembly is complete.

Attach as many dividers as desired to finish suture cart assembly (see photo at right).



suture cart with optional dividers

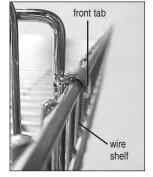


figure 8



front



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A. www.eaglegrp.com
- Phone: 302/653-3000 (Foodservice) 800/441-8440 (MHC/Retail) 800/637-5100
- Fax: 302/653-2065