



Steamtable Overshelf Assembly Instructions

1. Attach top shelf using 2 screws per side to the side panels. Threaded holes will line up with top and side panels. (refer to Figure A)
2. Attach the back sneeze guard to the side panels using the provided screws (2 per side) and to the top shelf.
 - a. Notches in the side panels should be facing forward on opposite side of sneeze guard. This is where the panels rest on the edge of steam table.
3. The overshelf will attach to the steam table using the screws already on the table (Figure B).
4. Remove these screws and line the side panel holes up to the table. Insert screws.

Figure A

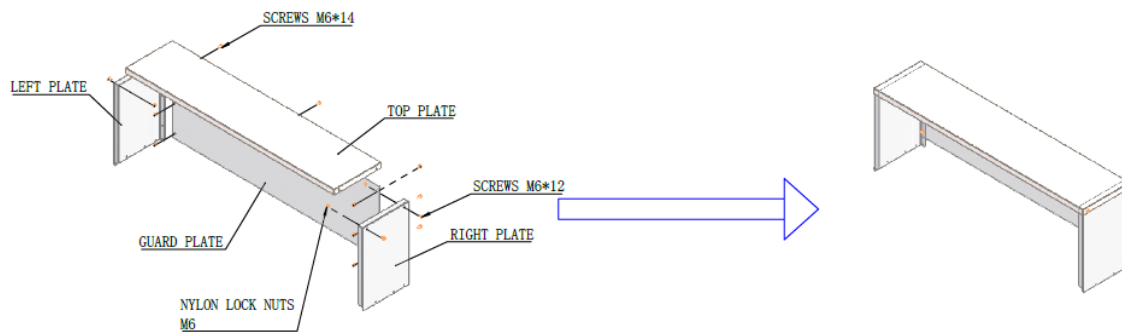


Figure B

